

Revolabs Fusion™ Microphone System — Polycom QDX 6000 Setup Guide

This setup guide will guide you through the steps needed to properly connect a Revolabs Fusion Microphone System to a Polycom QDX 6000 video codec.


Note: *It is important to carefully follow these instructions in order and completely. Otherwise your Fusion Microphone System and/or the video codec may not function properly. Please read through these instructions completely before proceeding. Contact Revolabs technical support if you have any questions.*

Requirements for connecting systems:

1. Revolabs Fusion 4 or 8 channel Microphone System
2. Polycom QDX 6000 Video Conferencing System
3. QTY 2 RCA male — RCA male cable
4. Amplified Speakers

Connecting the Cables

1. Connect a Male RCA to RCA audio cable between the RCA "CONF OUT" port on the Fusion and the Red "LINE IN" port on the QDX 6000.
2. Connect a Male RCA to RCA audio cable between the "CONF IN" port on the Fusion and the white "LINE OUT" port on the QDX 6000.
3. Connect a Male RCA audio cable between the "Room Out" port on the Fusion and the Amplified Speakers.

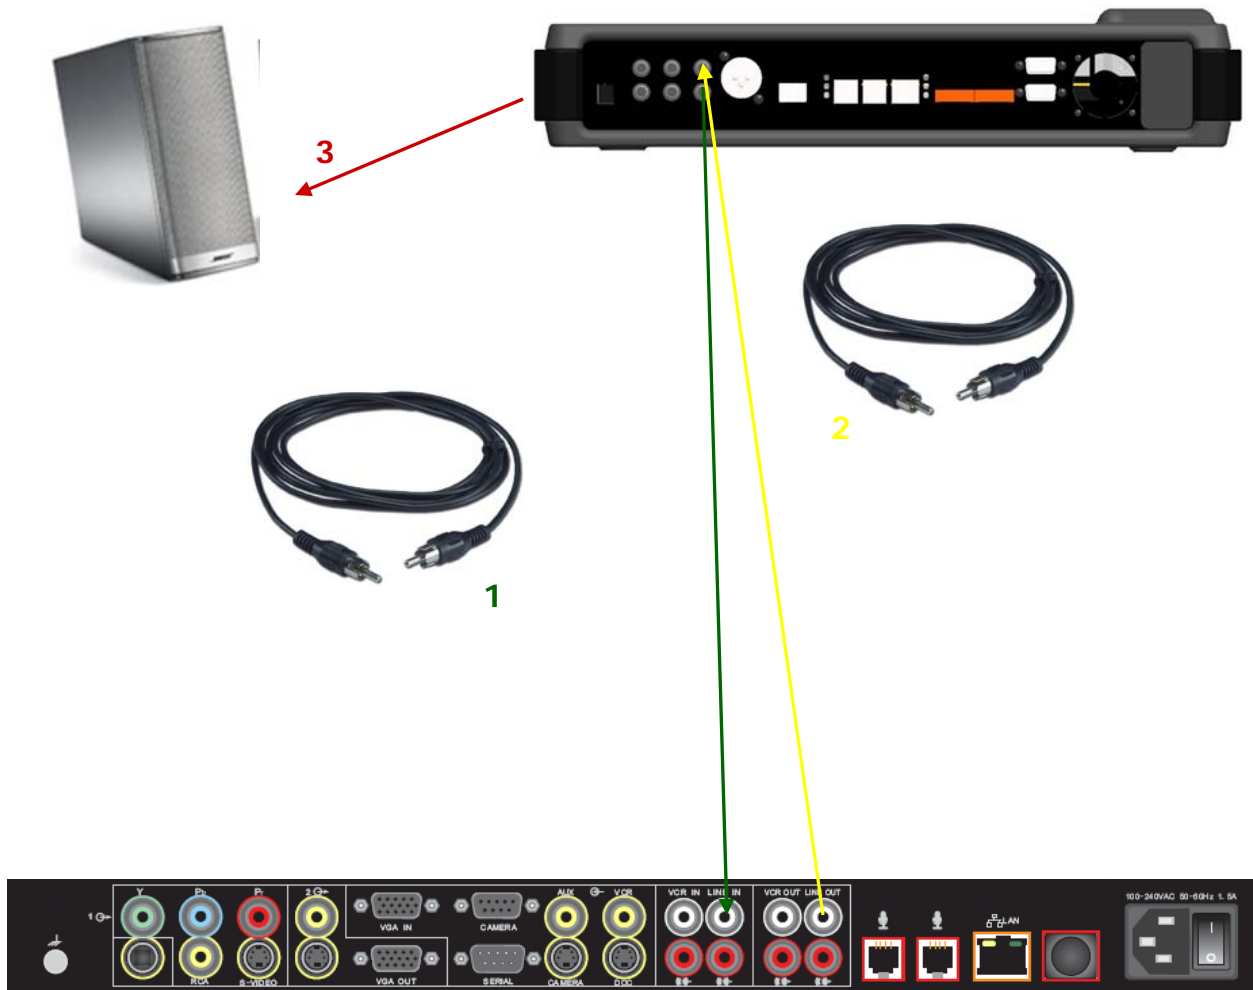

NOTE: You must use your Fusion remote control to control the room volume for both the audio and video conference calls. Adjusting the volume in the video codec will cause echo.

Configuring the Polycom QDX 6000 Video Codec

1. Push the HOME button to return to the MAIN MENU
2. Select SYSTEM
3. Select ADMIN SETTINGS
4. Select AUDIO
5. MIC GAIN is from -9 to +3. Start with "0" and raise/lower as needed
6. Turn ECHO CANCELLATION to OFF
7. Raise Polycom QDX 6000 volume on the remote control to MAXIMUM. This provides the Fusion with the maximum amount of echo cancellation reference.

NOTE: You must use your Fusion remote control to control the room volume for both the audio and video conference calls. Adjusting the volume in the video codec will cause echo.