

Revolabs Fusion™ - LifeSize Room 200 Setup Guide

NOTES AND CAUTIONS:

This setup guide will guide you through the step needed to properly connect a Revolabs Fusion device to a LifeSize Room 200 video codec.

1. Connecting the Cables
2. Configuring the Room 200 Video Codec

Note: *It is important to carefully follow these instructions in order and completely. Otherwise your Fusion System and/or the video codec may not function properly. Please read through these instructions completely before proceeding. Contact Revolabs technical support if you have any questions.*

Requirements for connecting systems:

1. Revolabs Fusion 4 or 8 channel system
2. LifeSize Room 200 video codec
3. Qty 1 FXLR – 3.5mm stereo male cable
4. Qty 1 RCA Male – 3.5mm stereo male cable
5. Amplified speakers

Connecting the Cables

CONNECTING A REVOLABS FUSION TO LIFESIZE ROOM 200 VIDEO CODEC

1. Connect a FXLR – 3.5mm stereo male cable audio cable between the “Conf. Out Mic” port on the Fusion and the “Mic in” port on the Room 200.
2. Connect a RCA Male – 3.5mm stereo male audio cable between the “Conf. In” port on the Fusion and the “Line Out” port on the Room 200.
3. Connect a Male RCA audio cable between the “Room Out” port on the Fusion and the Speakers.



NOTE: The speakers used for audio and video conferencing with this configuration must be connected to the Fusion for proper echo cancelation.

Configuring the Room 200 Video Codec

CONFIGURING THE AUDIO MENUS OF THE ROOM 200 VIDEO CODEC

1. Set the output volume on the Room 200 to 100% or in the audio configuration menu.
2. Turn OFF the echo cancelation or “AEC” for Mic Input.

NOTE: You must use your Fusion remote control to control the room volume for both the audio and video conference calls. Adjusting the volume in the video codec will cause echo.