



FLX VoIP User Guide

Handset call: Remove the dialer from the charger, leave microphones in the charger. Ensure that the microphone status on the screen of the handset is "off" (grey) for all microphones. Dial the number, and press the  key.

 
Conference call: Remove at least one microphone from the charger. Dialer and speaker are optional to be removed from the charger. Dial the number, and press the  key.

Switch between conference and handset call: At least one microphone must be out of the charger. Press the left soft-key labeled "Handset" or "Speaker" to switch between the two modes.

Use of components in charger tray: The dialer and speaker work and are active in the charger tray. To enable the microphones in the charger tray, press the multi-function button on the microphone to turn it on. Microphones in the charger tray always start muted, and stay muted unless an active call is taking place. During the call, you can mute and unmute the microphone by pressing the button.

 
Microphone LED:

Blinking green: microphone unmuted
 Blinking red: microphone muted
 Blinking red / orange / green:
 microphone connecting to
 base station





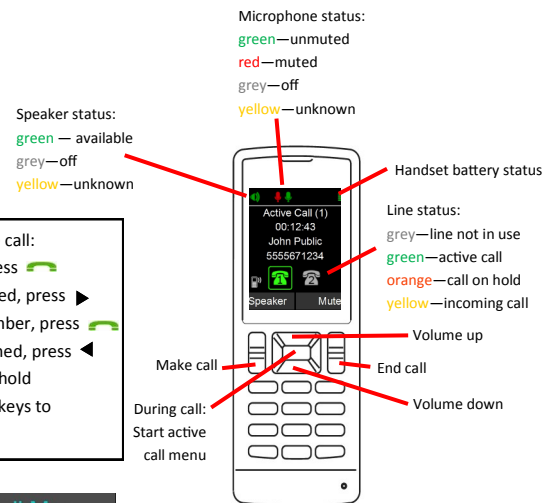


After finishing a call, return the microphones, speaker, and dialer back to the charger base!

FLX VoIP User Guide



To start a local conference call:

 - Dial the first number, press 
- Once the call is established, press 
- Now dial the second number, press 
- Once that call is established, press  to go back to the call on hold
- Select "Join" on the soft keys to establish the conference

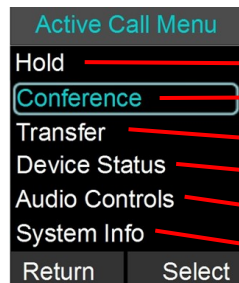

Hold — put caller on hold
 Conference — start a conference call, dial second number, or use recent calls / contacts
 Transfer — Transfer Call 1 to Call 2
 Device Status — Information about components and status
 Audio Controls — Change Volume, Equalizer, or Audio mixer setting
 System Info — System information

After finishing a call, return the microphones, speaker, and dialer back to the charger base!