

Revolabs HD Single / Dual Channel System — Sony PCS-1 Setup Guide

This setup guide will guide you through the steps needed to properly connect a Revolabs HD Single or Dual Channel System to a Sony PCS-1 video codec.

Note: *It is important to carefully follow these instructions in order and completely. Otherwise your Revolabs Microphone System and/or the video codec may not function properly. Please read through these instructions completely before proceeding. Contact Revolabs technical support if you have any questions.*


Requirements for connecting systems:

1. Revolabs HD Single or Dual Channel System
2. Sony PCS-1 video codec
3. QTY 1 3.5mm unbalanced male to 3.5mm unbalanced male cable*

* 07-35MUTO35MU-01 3.5mm unbalanced male to 3.5mm unbalanced male cable available from Revolabs

Connecting the Cables

1. Insert the unbalanced 3.5mm male connector to the CH 1 OUT port on the Revolabs Single or Dual Channel System. If using a Single Channel, DIP Switch #1 should be "OFF". If using a Dual Channel, DIP Switch #1 should be "ON".
2. Insert the other 3.5mm male connector into the "MIC 1" port on the Sony PCS-1.
3. Verify that DIP Switch #3 (mic/line) is "ON"

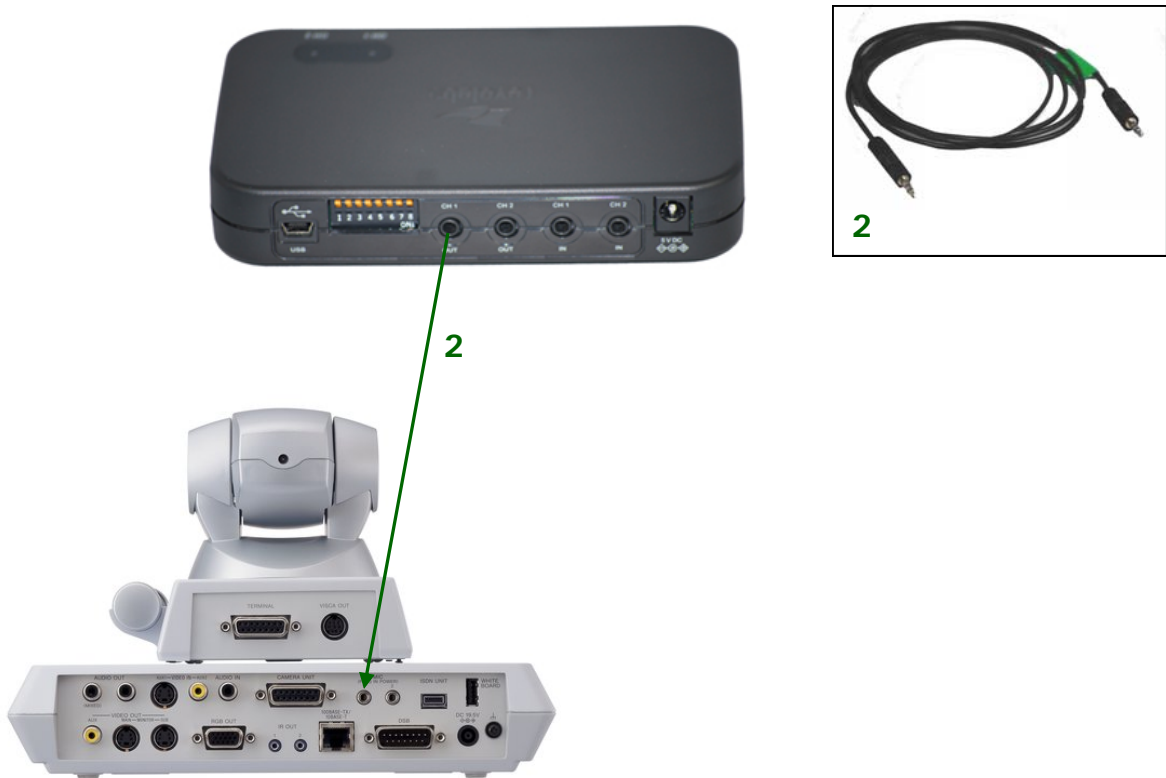

Configuring the Sony PCS-1 Video Codec

1. Push the TOOLS button on the remote control
2. Select SETUP
3. Select AUDIO to MIC
4. Select CTE to OFF
5. Select ECHO CANCELLER to ON
6. Save settings