

Revolabs Connection to Polycom HDX 9002


The Solo Single Channel system has an RCA cable included in the box that would plug into this cable (below). OR, a technician could simply cut off the RCA connector on our cable and put on a phoenix connector according to these instructions.

Audio Adapter Cable



This cable adapts the Polycom HDX system Phoenix audio connectors to standard RCA audio cables, such as the Audio Cable on page 2-35. It is dual male Phoenix to dual female RCA connectors (red/white).


Length	Part Number	RoHS Compliant
1 ft (0.3 m)	2457-23492-001	Yes

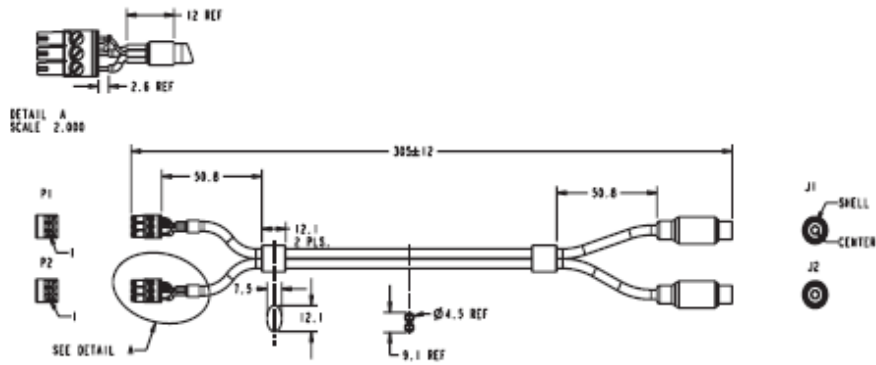

WIRING LIST				
PLUG	CONTACT	CONDUCTOR	CONTACT	JACK
P1	1	A+	CENTER	J1
	2	A-	SHELL	
	3	A DRAIN	—	
P2	1	B+	CENTER	J2
	2	B-	SHELL	
	3	B DRAIN	—	

INSTALL JUMPER BETWEEN CONTACT 2 AND CONTACT 3 OF BOTH P1 & P2 AS SHOWN IN DETAIL "A".

Polycom HDX 9001 and Polycom HDX 9002

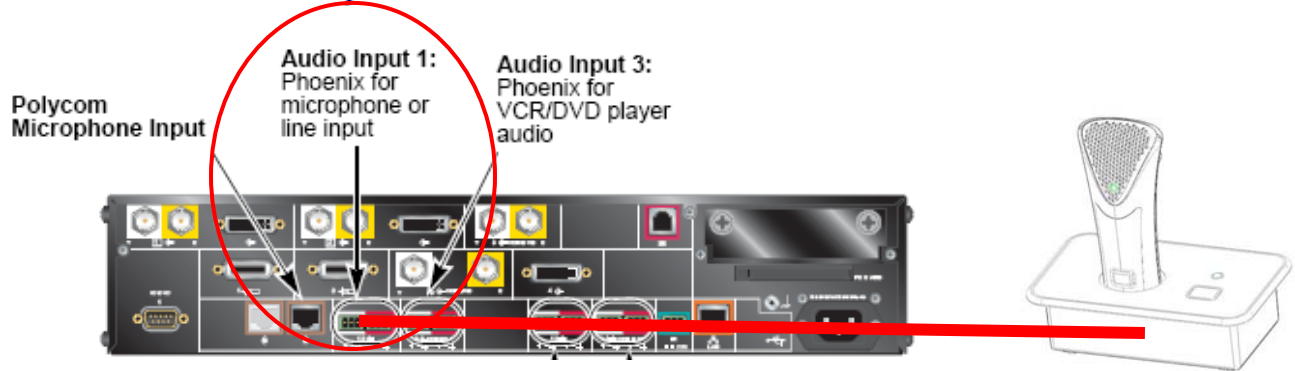

It does not matter whether the connection is to the left or right connector.

To configure the Polycom HDX system to use Revolabs Single Channel microphone connected directly to audio input 1:

Go to **System > Admin Settings > Audio > Audio Settings > .**

Set **Input Type** to **LINE LEVEL**.

Enable **Echo Canceller**.

Adjust the audio **Input Type Level** if necessary.

Speak into the microphones that are connected to the audio line inputs.

The audio meter should peak at about 5 dB for normal speech.