

Please consult the User Manual for your system for specific instructions on connecting to your video conference unit.

Lifesize Room Installation



Step 1

Step 2

1. Plug the red RCA connector on one end of **Cable C** into LifeSize video-station <Audio Out 1>, and then plug the red RCA connector on the other end into the Fusion Base Station <Conf In>.
2. Plug the black RCA connector on one end of **Cable C** into LifeSize video-station <Audio In>, and then plug the black RCA connector on the other end into the Fusion Base Station <Conf Out>.

To configure the LifeSize Room system:


Select the button from the main screen to access the System menu.
Select the **Administrator Preferences** settings.
Enter the administrator password and press **OK** (if needed).
Select the **Audio** settings.

Confirm or modify the following settings:

- **Voice Call Audio - Output**
- **Line Input - Enabled**
- **Line In to Line Out - Disabled**
- **Line In Acoustic Echo Canceller - Disabled**

Press **OK** to save changes.

Lifesize Team Installation

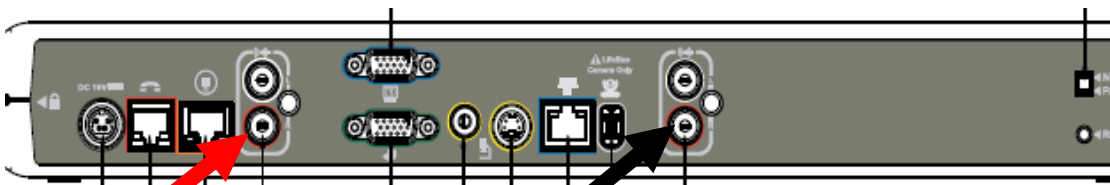

Step 1

Step 2

1. Plug the red RCA connector on one end of **Cable C** into LifeSize video-station <Audio Out 1>, and then plug the red RCA connector on the other end into the Fusion Base Station <Conf In>.
2. Plug the black RCA connector on one end of **Cable C** into LifeSize video-station <Audio In>, and then plug the black RCA connector on the other end into the Fusion Base Station <Conf Out>.

To configure the Lifesize Team system:

Select the button from the main screen to access the System menu.
Select the **Administrator Preferences** settings.
Enter the administrator password and press **OK** (if needed).
Select the **Audio** settings.


Confirm or modify the following settings:

- **Voice Call Audio - Output**
- **Line Input - Enabled**
- **Line In to Line Out - Disabled**
- **Line In Acoustic Echo Canceller - Disabled**

Press **OK** to save changes.

LifeSize Express Installation

NOTE: Requires 2 special RCA Female to 3.5mm mini adapters:

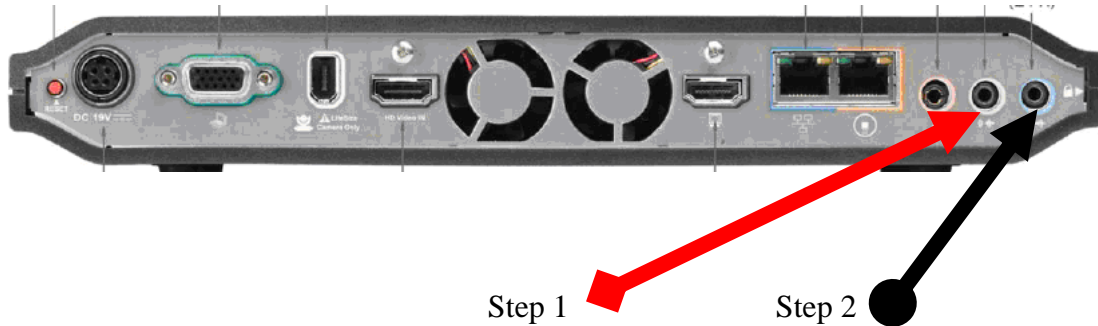

1. Plug the red RCA connector on one end of **Cable C** with the adapter attached into LifeSize video-station <Audio Out 1>, and then plug the red RCA connector on the other end into the Fusion Base Station <Conf In>.
2. Plug the black RCA connector on one end of **Cable C** with the adapter attached into LifeSize video-station <Audio In>, and then plug the black RCA connector on the other end into the Fusion Base Station <Conf Out>.

To configure the Lifesize Express system:

Select the button from the main screen to access the System menu.
Select the **Administrator Preferences** settings.
Enter the administrator password and press **OK** (if needed).
Select the **Audio** settings.

Confirm or modify the following settings:

- **Voice Call Audio - Output**
- **Line Input - Enabled**
- **Line In to Line Out - Disabled**
- **Line In Acoustic Echo Canceller - Disabled**

Press **OK** to save changes.