


Polycom Set Top VSX Installation

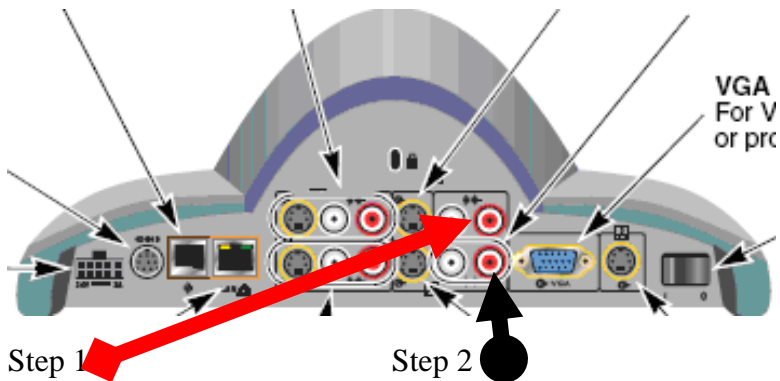

1. Plug the Red RCA connector on one end of **Cable C** into Polycom video-station <Audio In>, and then plug the black RCA connector on the other end into the Fusion Base Station <Conf Out>.
2. Plug the Black RCA connector on one end of **Cable C** into Polycom video-station <Audio Out>, and then plug the red RCA connector on the other end into the Fusion Base Station <Conf In>.

To configure the Polycom system:

:


Select the button from the main screen to access the System menu.
Select the **System / Admin** settings.
Enter the administrator password and press **OK** (if needed).
Select the **Audio** settings.
Confirm or modify the following settings:

- **Midrange Speaker - OFF**
- **Line Input – Audio Mixer**
- **Echo Canceller - OFF**
- **Line Output – Monitor Far Site Audio**

Press **OK** to save changes.

Polycom HDX 9000 Series Installation

NOTE: Requires 2 special RCA Male to 3.5mm 3 pin connectors Revolabs Part #07-POLHDX-01.

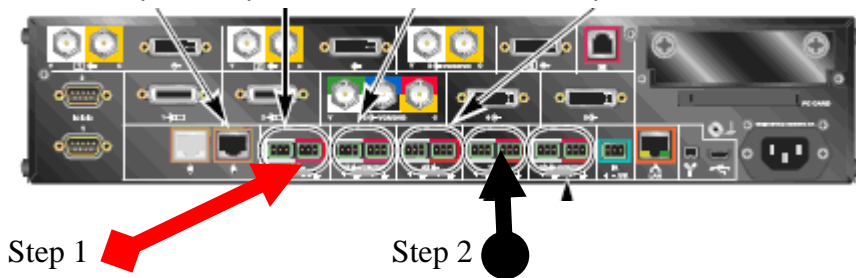

1. Plug the 3.5mm 3 pin cable into the Polycom video-station <Audio In 1 Red>, and then plug the RCA connector on the other end into the Fusion Base Station <Conf Out>.
2. Plug the 3.5mm 3 pin cable into the Polycom video-station <Audio Out 1 Red>, and then plug the RCA connector on the other end into the Fusion Base Station <Conf In>.

To configure the Polycom HDX 9000 Series system:

:
Select the button from the main screen to access the System menu.
Select the **System / Admin** settings.
Enter the administrator password and press **OK** (if needed).
Select the **Audio** settings.

Confirm or modify the following settings:

- **Input Type – Line Input**
- **Input Type Level – 50%**
- **Echo Canceller - OFF**
- **Line Output Mode – Fixed**
- **Line Output Level – 50%**

Press **OK** to save changes.