

Revolabs Executive HD Microphone System — Tandberg C60/C90 Setup

This setup guide will guide you through the steps needed to properly connect a Revolabs Executive HD Microphone System to a Tandberg C60 or C90 video codec.

Note: *It is important to carefully follow these instructions in order and completely. Otherwise your Executive HD Microphone System and/or the video codec may not function properly. Please read through these instructions completely before proceeding. Contact Revolabs technical support if you have any questions.*


Requirements for connecting systems:

1. Revolabs Executive HD 4 or 8 channel Microphone System
2. Tandberg C60 or C90 video codec
3. XLR male to mini-Phoenix cables


NOTE: The Tandberg C60 has 4 microphone inputs and the C90 has 8 microphone inputs. Therefore, the 4-channel Executive HD will interface directly only to the C60 while both the 4 and 8 channel Executive HD systems will interface directly with the C90.

Connecting the Cables


1. Connect the first mini Phoenix – XLR audio cable between the Executive HD OUT 1 port and the “MIC 1” port on the Tandberg C60/C90.
2. Continue connecting mini Phoenix to XLR cables between the Executive HD and Tandberg codec as needed (8-channel Executive HD and C90 codec shown)

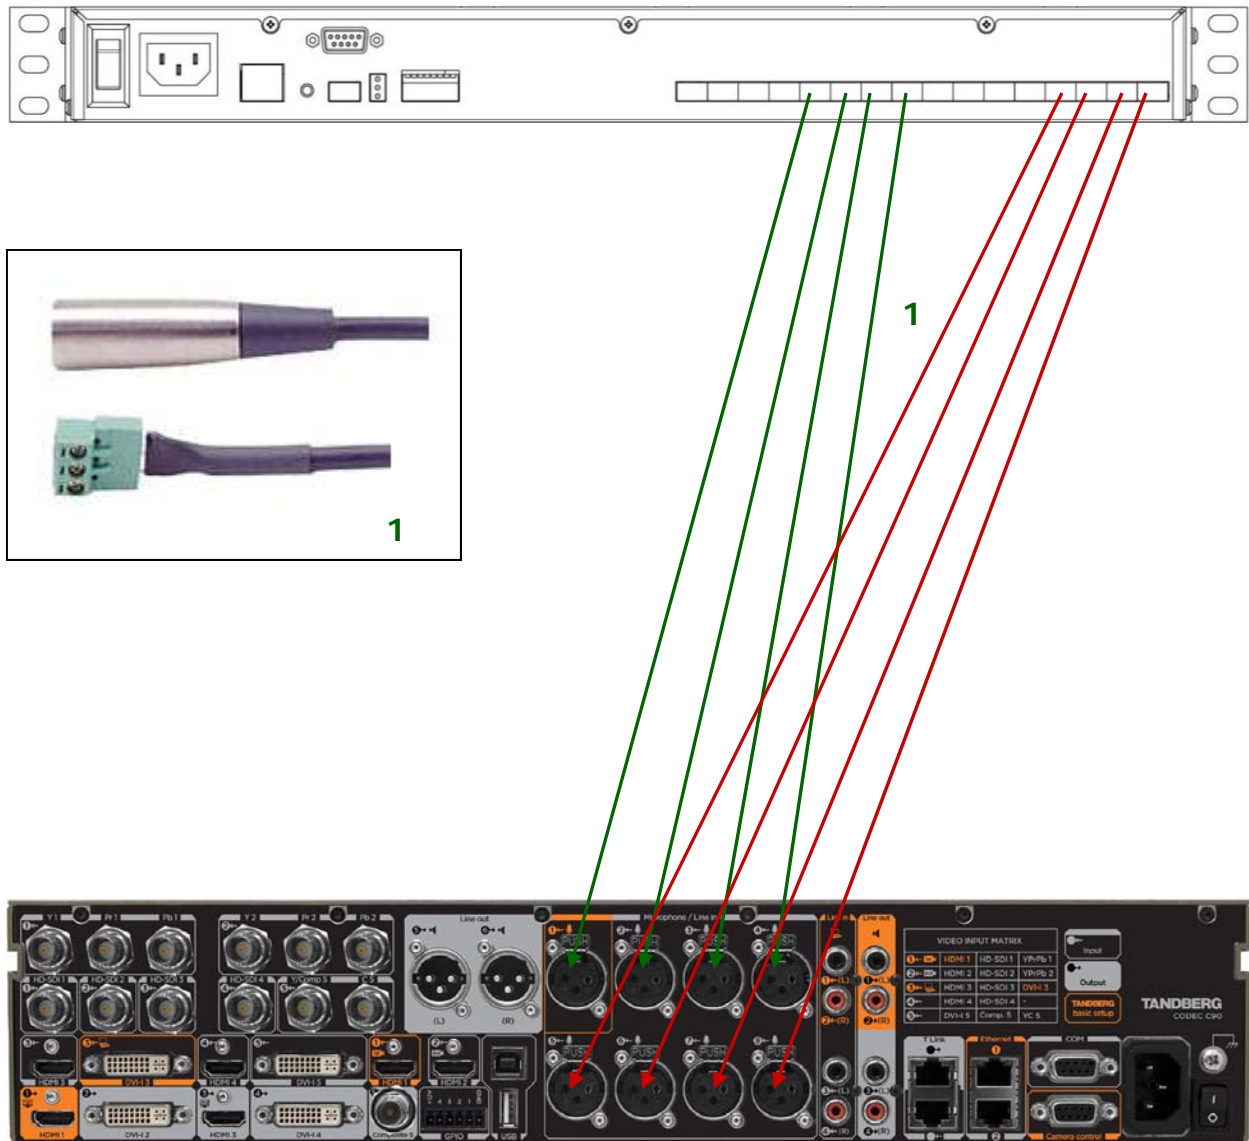


Configuring the Tandberg C60/C90 Video Codec

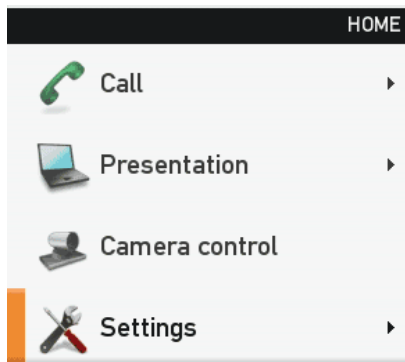

1. Select **SETTINGS**

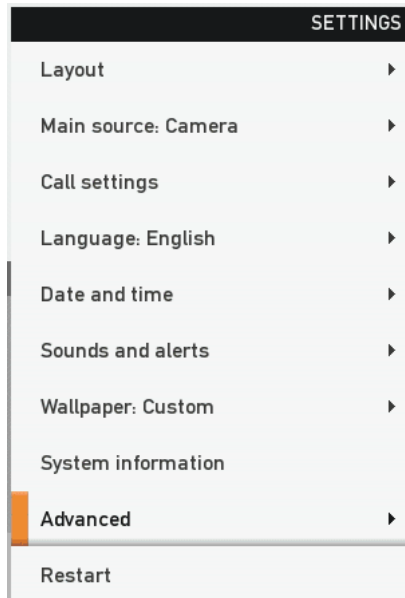

2. Select **ADVANCED**

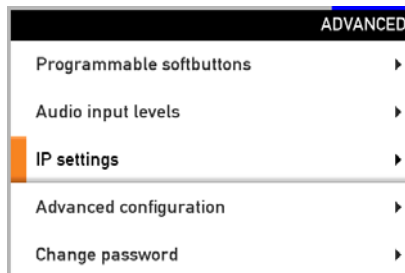

3. Select **ADVANCED CONFIGURATION**

Configuring the Tandberg C60/C90 Video Codec



4. Select **AUDIO**
5. Select **INPUT**
6. Select **MICROPHONE 1**
7. Select **ECHO CONTROL** and turn **ON**
8. Select **NOISE REDUCTION** and turn **ON**
9. Do this for all applicable microphone inputs